





 №5








№1 → №2 → №3 → №4 → **№5**












INNOVATIVE



METTA®

ERGONOMICS

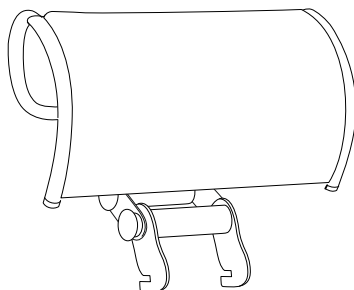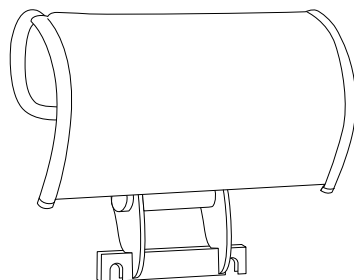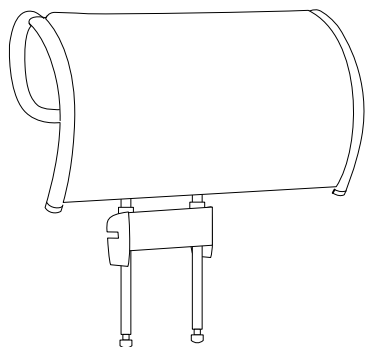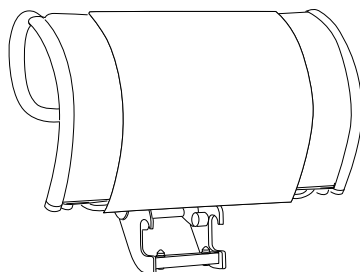


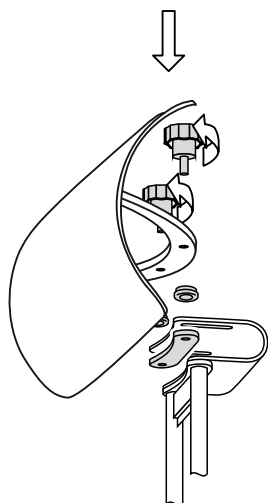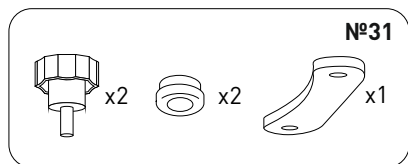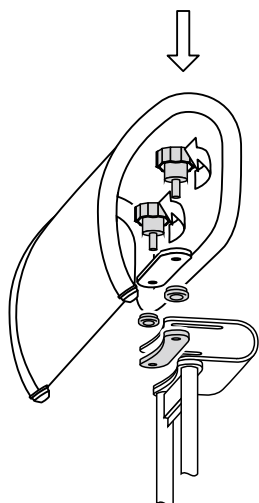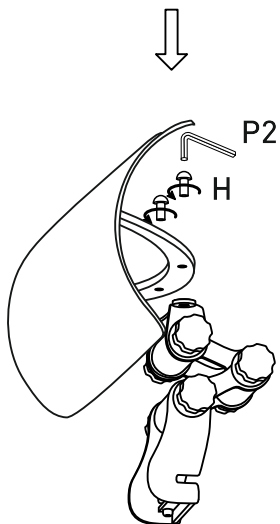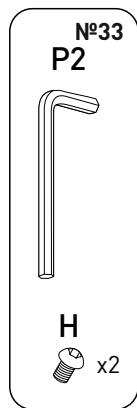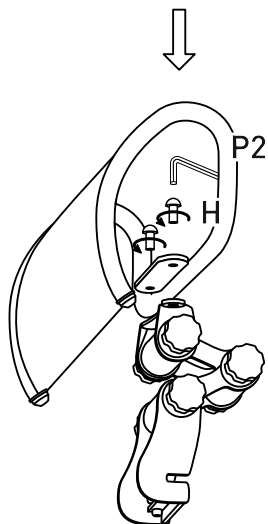

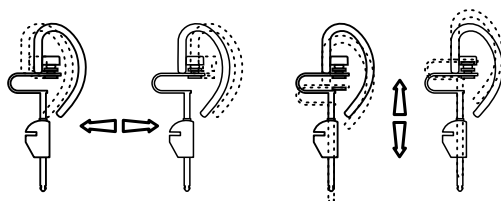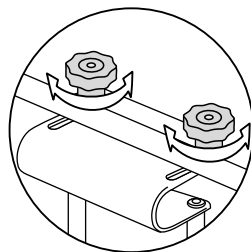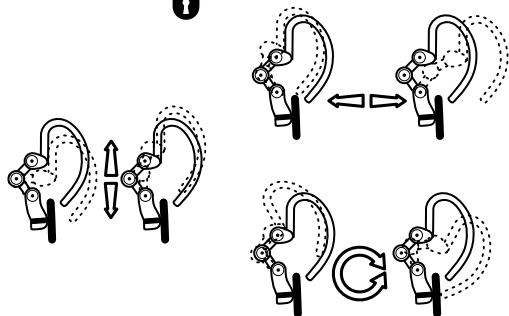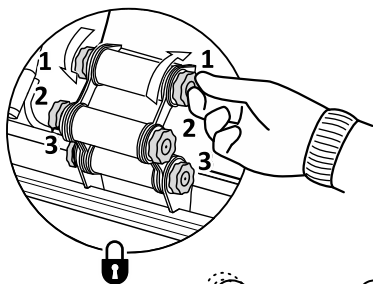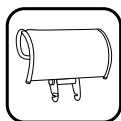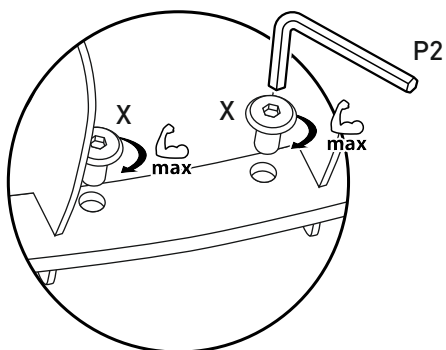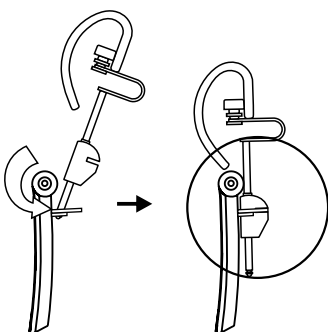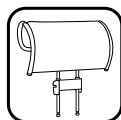
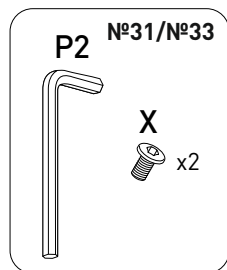
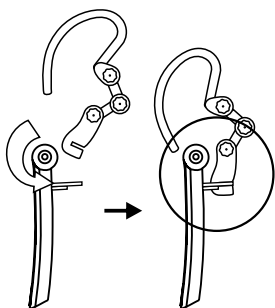
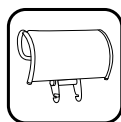


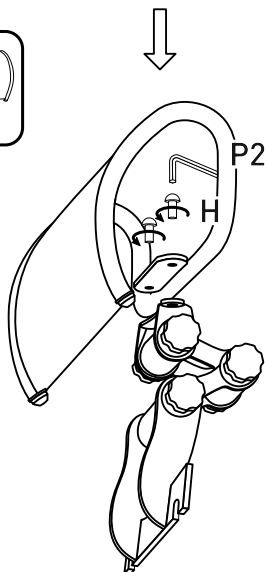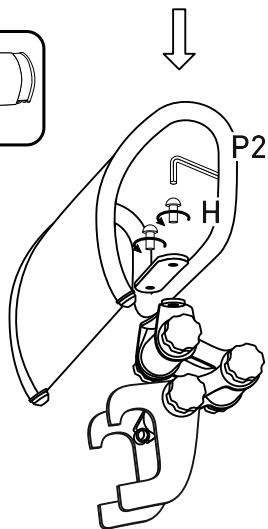



Nº33
P2



H
x2




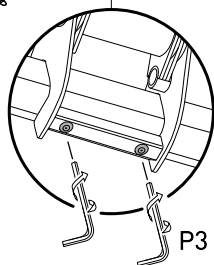
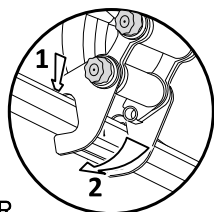
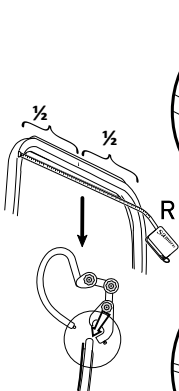


Nº21
P3




R

Samurai

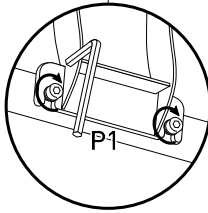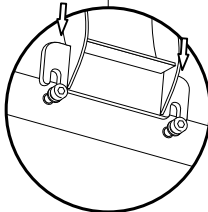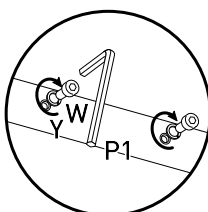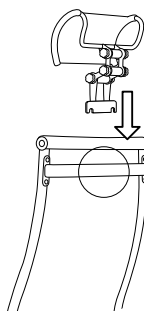

Nº4
P1



W
x2

Y
x2

